


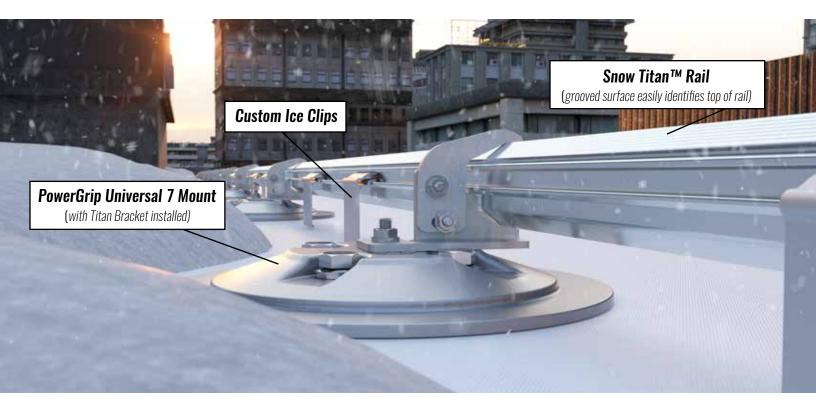

Required Components



Installation Tips & Precautions

Recommended max length of continuous row is 100' to allow for thermal expansion.

Trim rails if necessary so that the rail does not extend more than 6" beyond the end Snow Titan assemblies.

At no time should you use the installed Snow Titan™ rail as part of your fall protection system.



Snow Titan™-M INSTALLATION INSTRUCTIONS

REQUIRED TOOLS:



Industrial grade screwgun



7/16" hex socket & adaptor for screwgun



chalk line or laser



Dial indicator torque wrench



Sawzall to trim excess length of rail


Snow Titan™-M & Rail Installation



Set the rail in the open brackets, positioning it so that the surface with the grooves is at the top and the end overhangs no more than six (6) inches. Close the bracket and tighten the 7/16" hex bolts to 100 in-lbs. (If installed correctly there should be no play within the closed and tightened brackets.)



Going to the next 7.5' section repeat previous step by attaching the next Snow Titan $^{\text{TM}}$ rail by sliding the rail connectors into both rails.

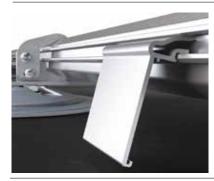

Snap-in Ice Clips equally spaced between mounts. 2-4 Ice Clips will be needed depending on mount spacing.



Continue to assemble additional lengths of Snow Titan™ rails until either the run is complete or you have installed 100 feet of rail.