


INSTALLATION INSTRUCTIONS FOR ALL PUSH-PIN CLAMPS

REQUIRED TOOLS

 Recognized for mechanical load testing per UL2703 and



Industrial grade screw gun



9/16" hex socket



Calibrated torque wrench

Tilt AceClamp® so pins open to fit your roof profile. They come 100 in a box.



STEP #1

Position the AceClamp onto the roof panel. See illustrations below for panel orientation.



STEP #2

Tighten AceClamp on roof panel with 9/16" socket.



STEP #3


Torque AceClamp with a calibrated torque wrench to recommended specs.



STEP #4



A2®-N™ & A2®-Nw™ Clamps
Assure that clamp hook is oriented towards the seam side.

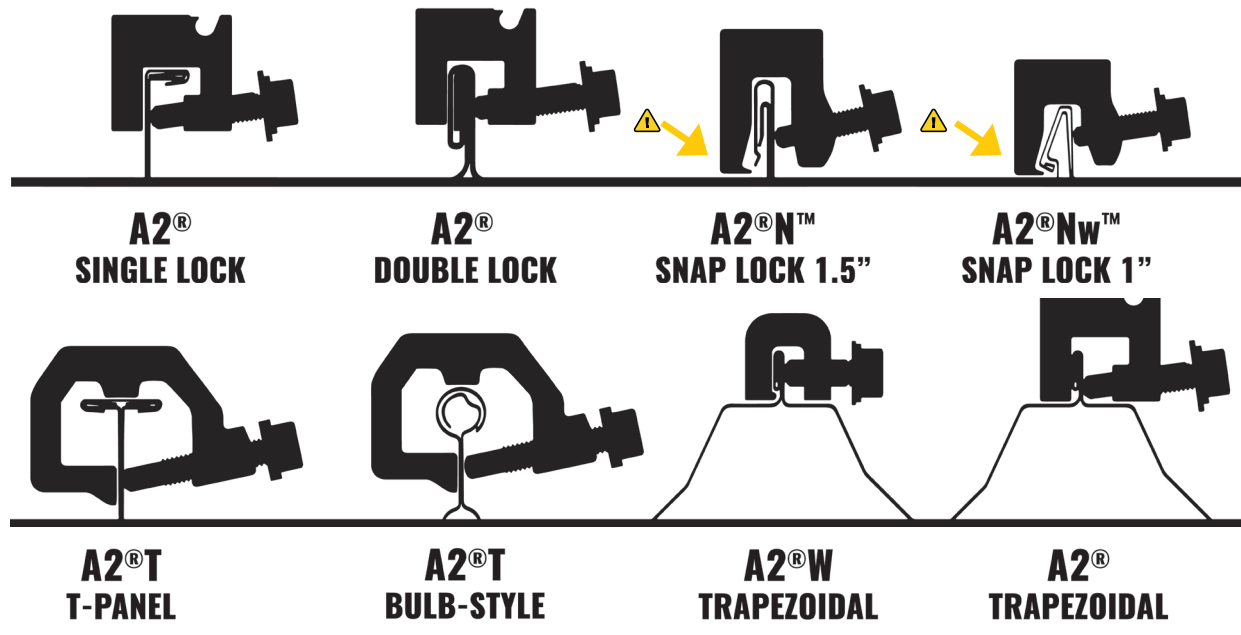

NOT A FALL RESTRAINT DEVICE

ACE CLAMP®
Innovative Roofing Solutions™

a product of **PMG Industries Inc.**

87 Spring Lane Plainville, CT 06062 • P: 860.351.0686 F: 860.351.0689 www.aceclamp.com V101723

*Photos shown are for representative purposes only. Actual product may vary. Design subject to change without notice. Always use OSHA approved safety equipment and procedures when working on a roof. Not responsible for typographical errors.